


PRINCE AUGUST

912
913
936
937

KAROLINERS Pikemen and Cavalry Painting Instructions

- In addition to filing off any flash from the figure, the bottom should be flattened where the ingot was removed.
- Wash the figure in warm soapy water in preparation for painting.
- Prime the pieces with a white undercoat then allow 24 hours to dry.
- Always paint the lighter colours first as these are easily overpainted with a darker colour.
- Paint as supplied is usually too thick. Thin with the appropriate thinners until it covers the areas touched by the brush but does not spread to other areas.
- Shading or dry brushing will enhance detail on the figures giving better depth and animation.
- We recommend that you give the figures a coat of either matt or gloss varnish. Remember however never to varnish over metal finish paints as this may cause the metallic sheen to spread to other areas which you have carefully painted.

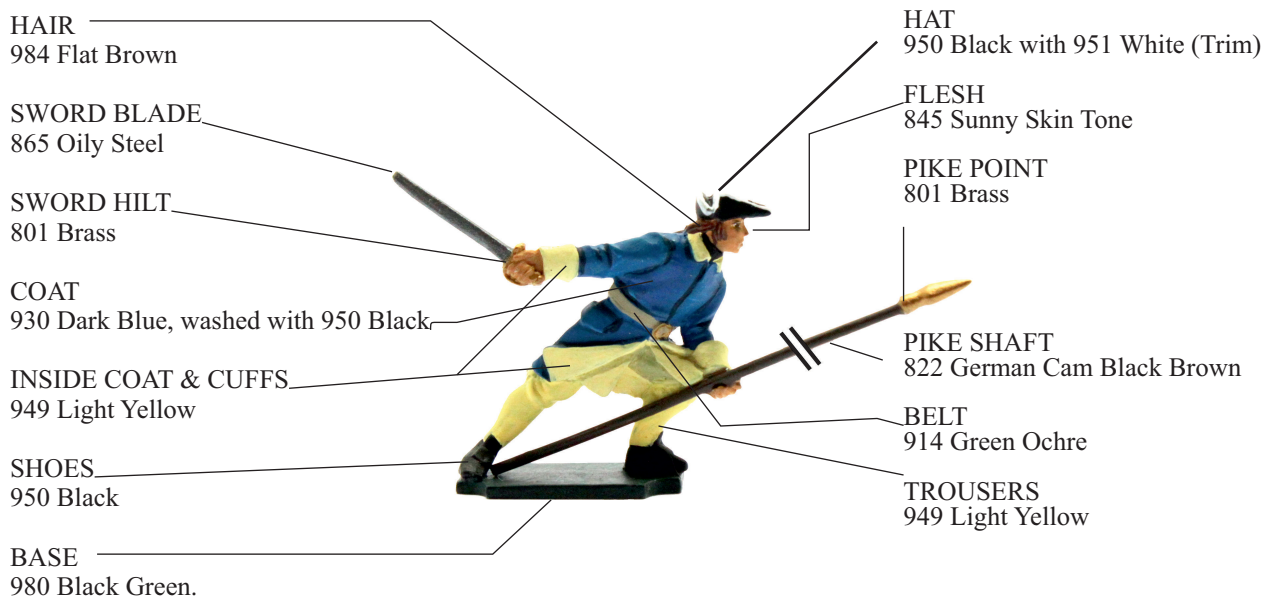

All figures were primed and undercoated in white undercoat, and further coats of paint were dry brushed or painted over this.

Pike heads are the only part of the pike that are castable. 3 Copper rods are supplied with Pike men moulds. Additional copper rod packs are available on website. To attach rod to pike head, drill a 2mm hole with a 1 mm drill bit. Dip the drill bit into white spirit prior to drilling to prevent metal sticking to the drill.